



## **TA3709 Fitting Guide**

 
Remove headrest from seat Caution, the headrest stalks can be coated with a small amount of grease.

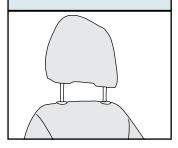


2 Undo side velcro and place cover over seat. Ensure the hole in the side of the seat cover is facing outwards – this must be in line with the seat mounted airbag deployment housing.

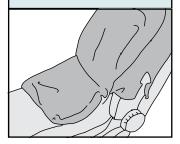


Align cover with plastic headrest insertion points.




Pull the front of the cover down and push the "Tuck-in" pouch between the back and the base of the seat.

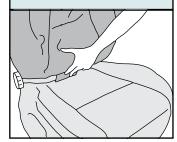

Fasten the side Velcro around the seat adjusters or armrests if applicable.

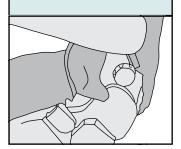


Push/tuck the base side piping into the plastic moulding around the side of the seat base.

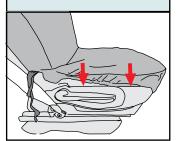


Pull the base part of the cover over the front base cushion.




Find the two Velcro straps at the front base of the seat

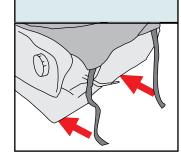

Thread the Velcro strap underneath the seat and fasten to the Velcro at the back of the cover.

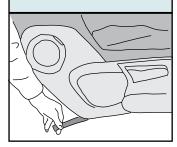

 Attach the headrest cover to headrest and reattach to the seat.



Repeat process for passenger seat.

